

Home Movie Duplication



Video8 Tape to DVD (easy method)

The Sony CCD-TR70 Camcorder is connected to the Sanyo DVD Recorder, and can be used to copy home movies from **Video8** tape to DVD. The Sony CCD-TR70 **will not play Hi8 or Digital8 tapes**. Allow yourself enough time to transfer your movies. The DVD can hold up to 2-hours of video, and also needs up to 1-hour to finalize the DVD for playback on your home equipment.

***** WARNING *****

Media is susceptible to damage. The Coquitlam Public Library is not responsible for any damage that may occur to your media by using this equipment. Do not use any tapes that are damaged (broken, ruptured, misaligned, overlapped, gapped/perforated holes, bent, etc.). Doing so may damage the equipment or further damage the tape.

By using the duplication equipment you are confirming that you are the copyright holder for all media and content that you digitize. You also agree that the Coquitlam Public Library will take no responsibility for any copyright violations you may incur as a result of using the room, its' equipment and/or software.



It is recommend that you protect your home video tape from being overwritten or erased by sliding the write protection tab to the **SAVE position**, located on the back edge of the tape. The photo above shows a tape that is protected.

*** FAILING TO USE THE SAVE POSITION MAY RESULT IN YOUR VIDEO BEING PERMANANTLY LOST ***

What you will need

1



Sign-out the Remote at the front counter of the Library



2



A blank DVD-R or DVD-RW (DVD+R and DVD+RW are NOT supported)



3



A Video8 Tape (Hi8 and Digital8 tapes are NOT supported)

Blank DVDs are available for purchase at the front counter of the library

Prepare the Sony Camcorder

1 Slide the **Power** button to the **PLAYER** position (turns on the camcorder)




2 Slide the **OPEN** button to the left and **lift** to open the tape lid



3 Press the blue **EJECT** button



4 Insert your **Video8** tape

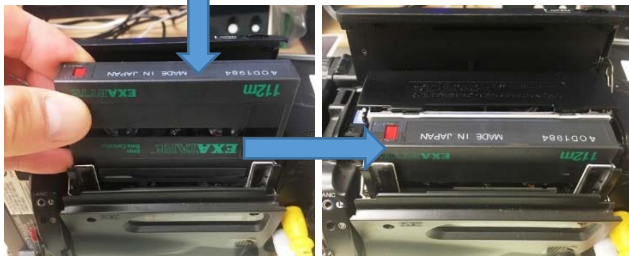

5 Push the **door closed**, and **close the lid**




Start recording

- 1 Press the **Power** button
- 2 Press **Input Select** on the remote control and select **L1 (Back)**
- 3 Press **Open/Close**, Insert blank DVD, Press **Open/Close**
- 4 Use the **Camcorder** buttons to find where you want to start
- 5 Press **Play** on the Camcorder
- 6 Press **Record** to start recording
- 7 Press **Stop** when you have finished recording (video will write to the DVD)
- 8 Press **Stop** on the Camcorder
- 9 If you want to record other video from the Camcorder, **repeat steps 4 to 8** as needed (a new menu title will be created for each recording)

Finalize the DVD

The DVD must be finalized before it will play on your home DVD player or on your home computer. You will need the remote control, which is available for sign-out at the front desk.

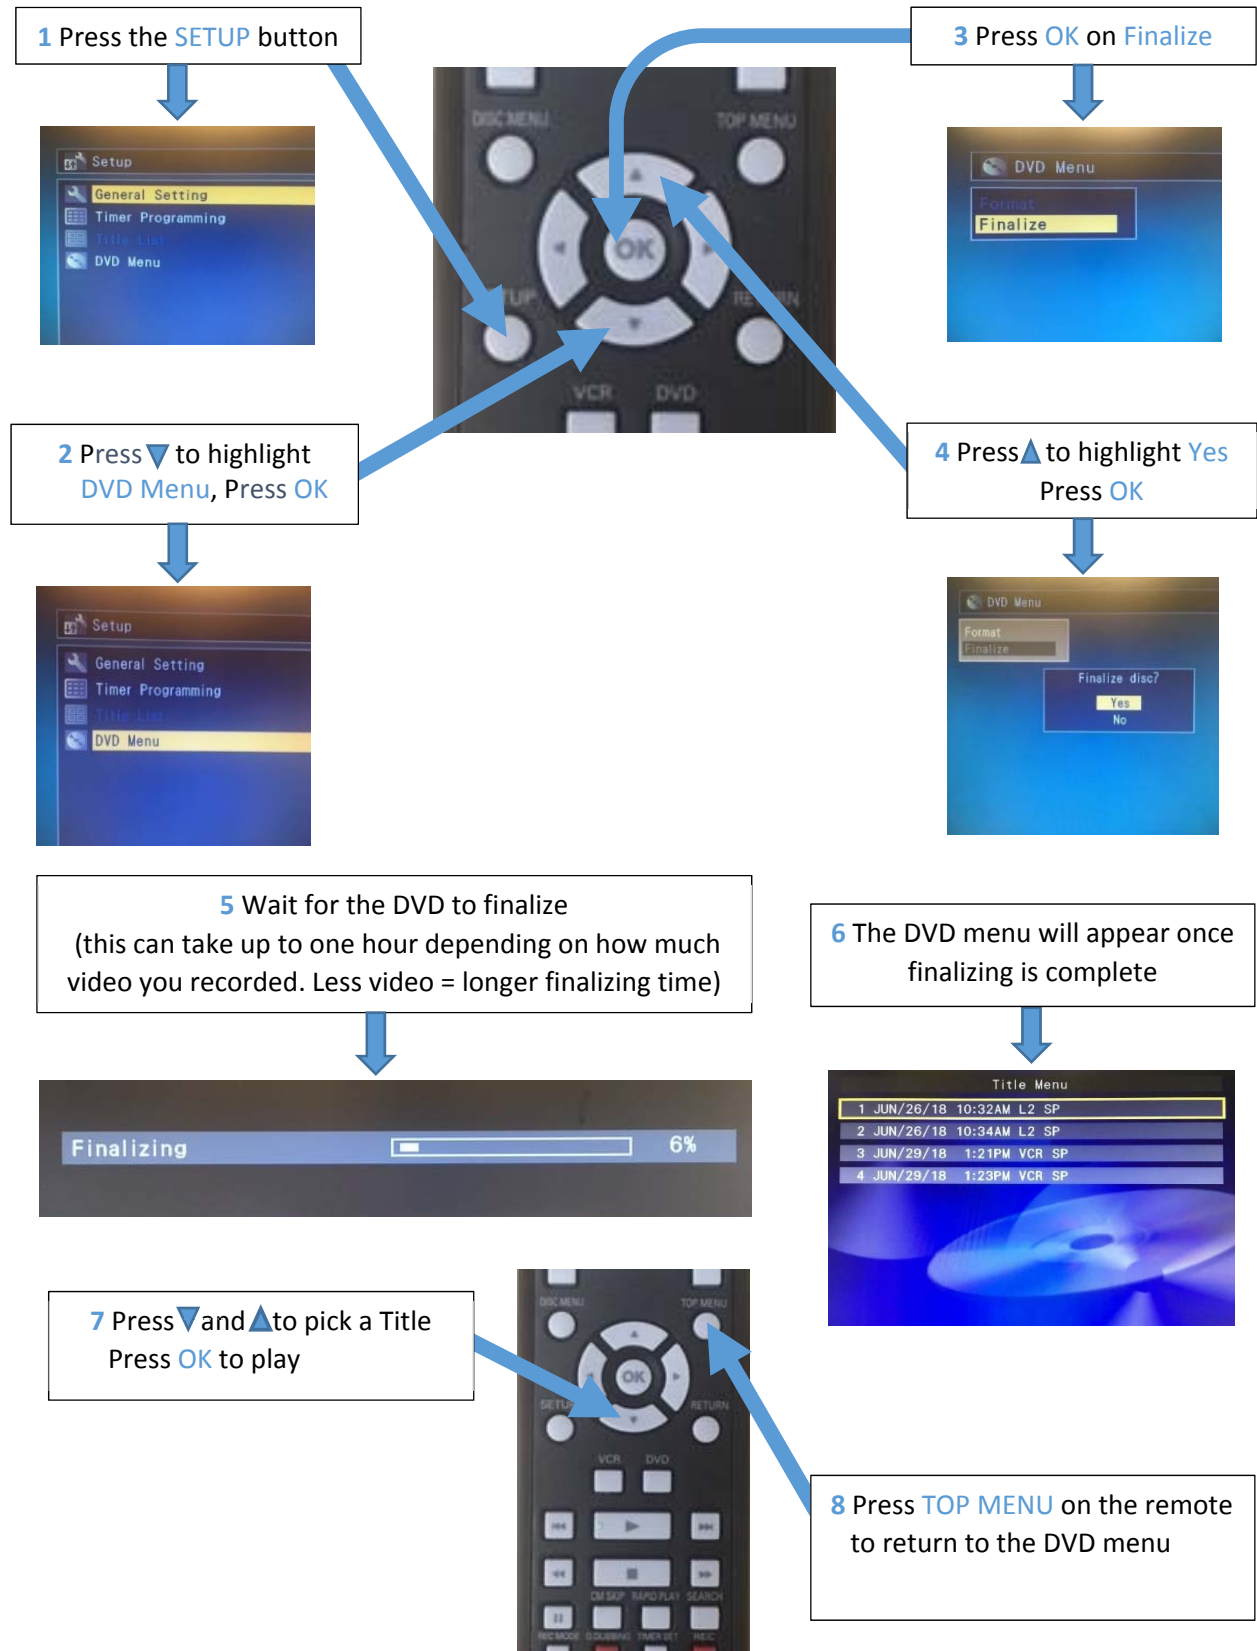

Shutdown the Equipment

Remove your VHS tape and DVD from the DVD Recorder and turn it off



1 Press the **eject buttons** to eject your DVD and VHS tape (or disconnect your video camera)

2 Turn **OFF** the Sanyo DVD Recorder

Remove your Video8 tape from the Camcorder and turn it off

- 1 Slide the **OPEN** button to the left and **lift** to open the tape lid
- 2 Press the blue **EJECT** button
- 3 Remove your **Video8** tape
- 4 Push the **door closed**, and **close the lid**
- 5 Slide the **Power** button to the **OFF** position (turns off the camcorder)



Adjust the Volume

The sound comes from the monitors' internal speakers.


To adjust the volume, push the buttons underneath the monitor



Press **1** to show the menu
Press **▼** or **▲** to scroll to **AUDIO ADJUST**
Press **2** to select



Press **▲** to scroll up to **VOLUME**
Press **2** to select

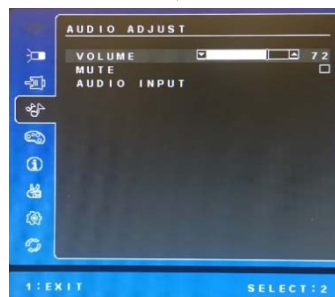

Press **▲** or **▼** to adjust the volume
Press **1** to exit volume
Press **1** to exit audio adjust
Press **1** to exit menu

