

Vehicle Diagnostic Scanner

at Coquitlam Public Library

Getting Started

For detailed instructions, refer to the AD310 User's Manual included in this kit, or view the online user's manual at coqlibrary.ca/vehicle-diagnostic-scanner.

1. Ensure your vehicle is shut off and in a safe environment.
2. Locate the DLC (Data Link Connector or Diagnostic Link Connector) on your vehicle.
 - a. The DLC is usually located within 12 inches of the instrument panel, under or around the driver's side.
 - b. If you can't find the DLC, refer to the vehicle's service manual.
3. Plug the Vehicle Diagnostic Scanner into the DLC.
4. Turn on the ignition.
 - Turn the key to ON position only; do not start the engine.
5. Press ENTER to enter the **Main Menu**.
6. Use the UP/DOWN scroll button to select **Diagnostics** from the menu.
7. Press ENTER to confirm.
8. Use the UP/DOWN scroll button to select **Read Codes** from the Diagnostic Menu and press ENTER.
9. Use the UP/DOWN scroll button to select **Stored Codes** or **Pending Codes** and press ENTER.
10. View the trouble codes and their definitions.
11. To clear or erase the trouble codes, refer to the AD310 User's Manual.



Vehicle Diagnostic Scanner

at Coquitlam Public Library

Getting Started

For detailed instructions, refer to the AD310 User's Manual included in this kit, or view the online user's manual at coqlibrary.ca/vehicle-diagnostic-scanner.

1. Ensure your vehicle is shut off and in a safe environment.
2. Locate the DLC (Data Link Connector or Diagnostic Link Connector) on your vehicle.
 - a. The DLC is usually located within 12 inches of the instrument panel, under or around the driver's side.
 - b. If you can't find the DLC, refer to the vehicle's service manual.
3. Plug the Vehicle Diagnostic Scanner into the DLC.
4. Turn on the ignition.
 - Turn the key to ON position only; do not start the engine.
5. Press ENTER to enter the **Main Menu**.
6. Use the UP/DOWN scroll button to select **Diagnostics** from the menu.
7. Press ENTER to confirm.
8. Use the UP/DOWN scroll button to select **Read Codes** from the Diagnostic Menu and press ENTER.
9. Use the UP/DOWN scroll button to select **Stored Codes** or **Pending Codes** and press ENTER.
10. View the trouble codes and their definitions.
11. To clear or erase the trouble codes, refer to the AD310 User's Manual.

