

Home Movie Duplication



**COQUITLAM
PUBLIC
LIBRARY**

MiniDV Camcorder Tape to DVD (easy method)

The Panasonic PV-GS80 Camcorder is connected to the Sanyo DVD Recorder, and can be used to copy home movies from MiniDV tape to DVD. Allow yourself enough time to transfer your movies. The DVD can hold up to 2-hours of video, and also needs up to 1-hour to finalize the DVD for playback on your home equipment.

***** WARNING *****

Media is susceptible to damage. The Coquitlam Public Library is not responsible for any damage that may occur to your media by using this equipment. Do not use any tapes that are damaged (broken, ruptured, misaligned, overlapped, gapped/perforated holes, bent, etc.). Doing so may damage the equipment or further damage the tape.

By using the duplication equipment you are confirming that you are the copyright holder for all media and content that you digitize. You also agree that the Coquitlam Public Library will take no responsibility for any copyright violations you may incur as a result of using the room, its' equipment and/or software.



It is recommend that you protect your home video tape from being overwritten or erased by sliding the write protection tab to the **SAVE position**, located on the back edge of the tape. The photo above shows a tape that is protected.

*** FAILING TO USE THE SAVE POSITION MAY RESULT IN YOUR VIDEO BEING PERMANENTLY LOST ***

What you will need

1



Sign-out the Remote at the front counter of the Library



2



A blank DVD-R or DVD-RW (DVD+R and DVD+RW are NOT supported)



3



A MiniDV Tape

 
Blank DVDs are available for purchase at the front counter of the library

Prepare the Panasonic Camcorder


1 Slide the **Power** button to **ON** position. The **red** light will turn on.



2 Rotate the **knob** to the Play position (**green** arrow)

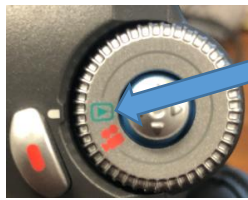

 3 Slide the **OPEN/EJECT** button forward and outward to open the tape compartment

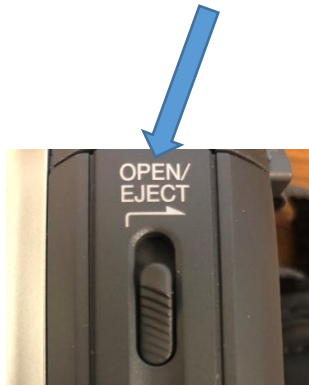

4 Insert your **MiniDV** tape

 


5 Squeeze the door until it gently **hits** the tape cage, **wait** for the tape to lower, fully squeeze closed




Start recording

The Panasonic MiniDV Camcorder is connected to the Sanyo DVD recorder through the **L2 (Front)** connector. **You will need the Sanyo remote** to ensure the proper **L2 (Front)** input is selected (Step 2 below). The Sanyo remote must be checked out from the front counter of the Library

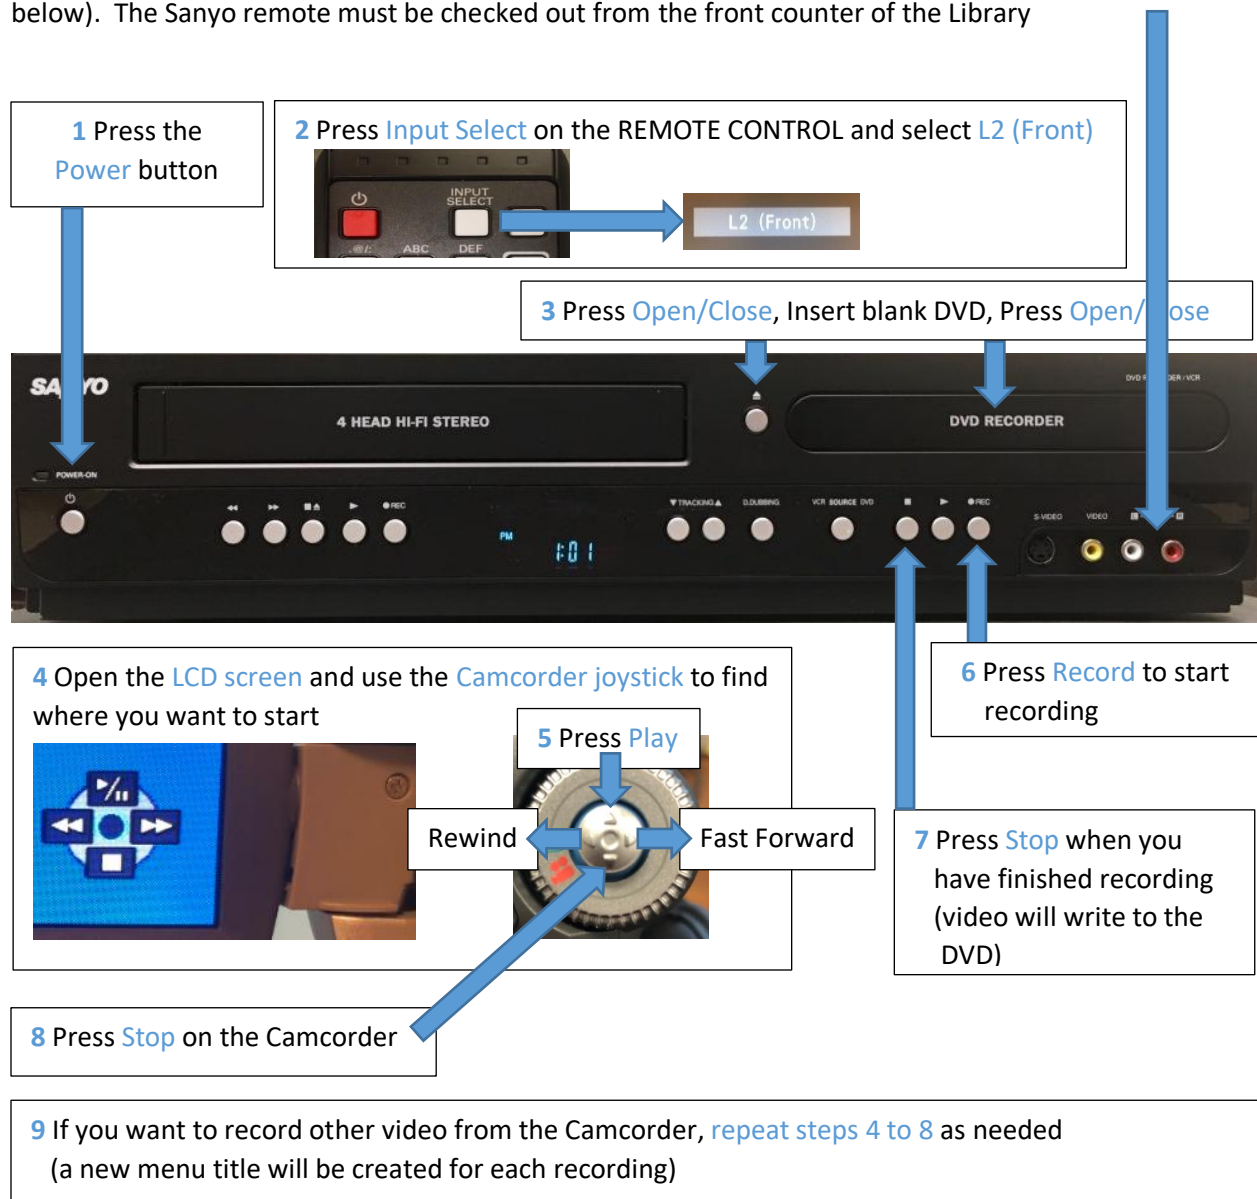

Finalize the DVD

The DVD must be finalized before it will play on your home DVD player or on your home computer. You will need the remote control, which is available for sign-out at the front desk.

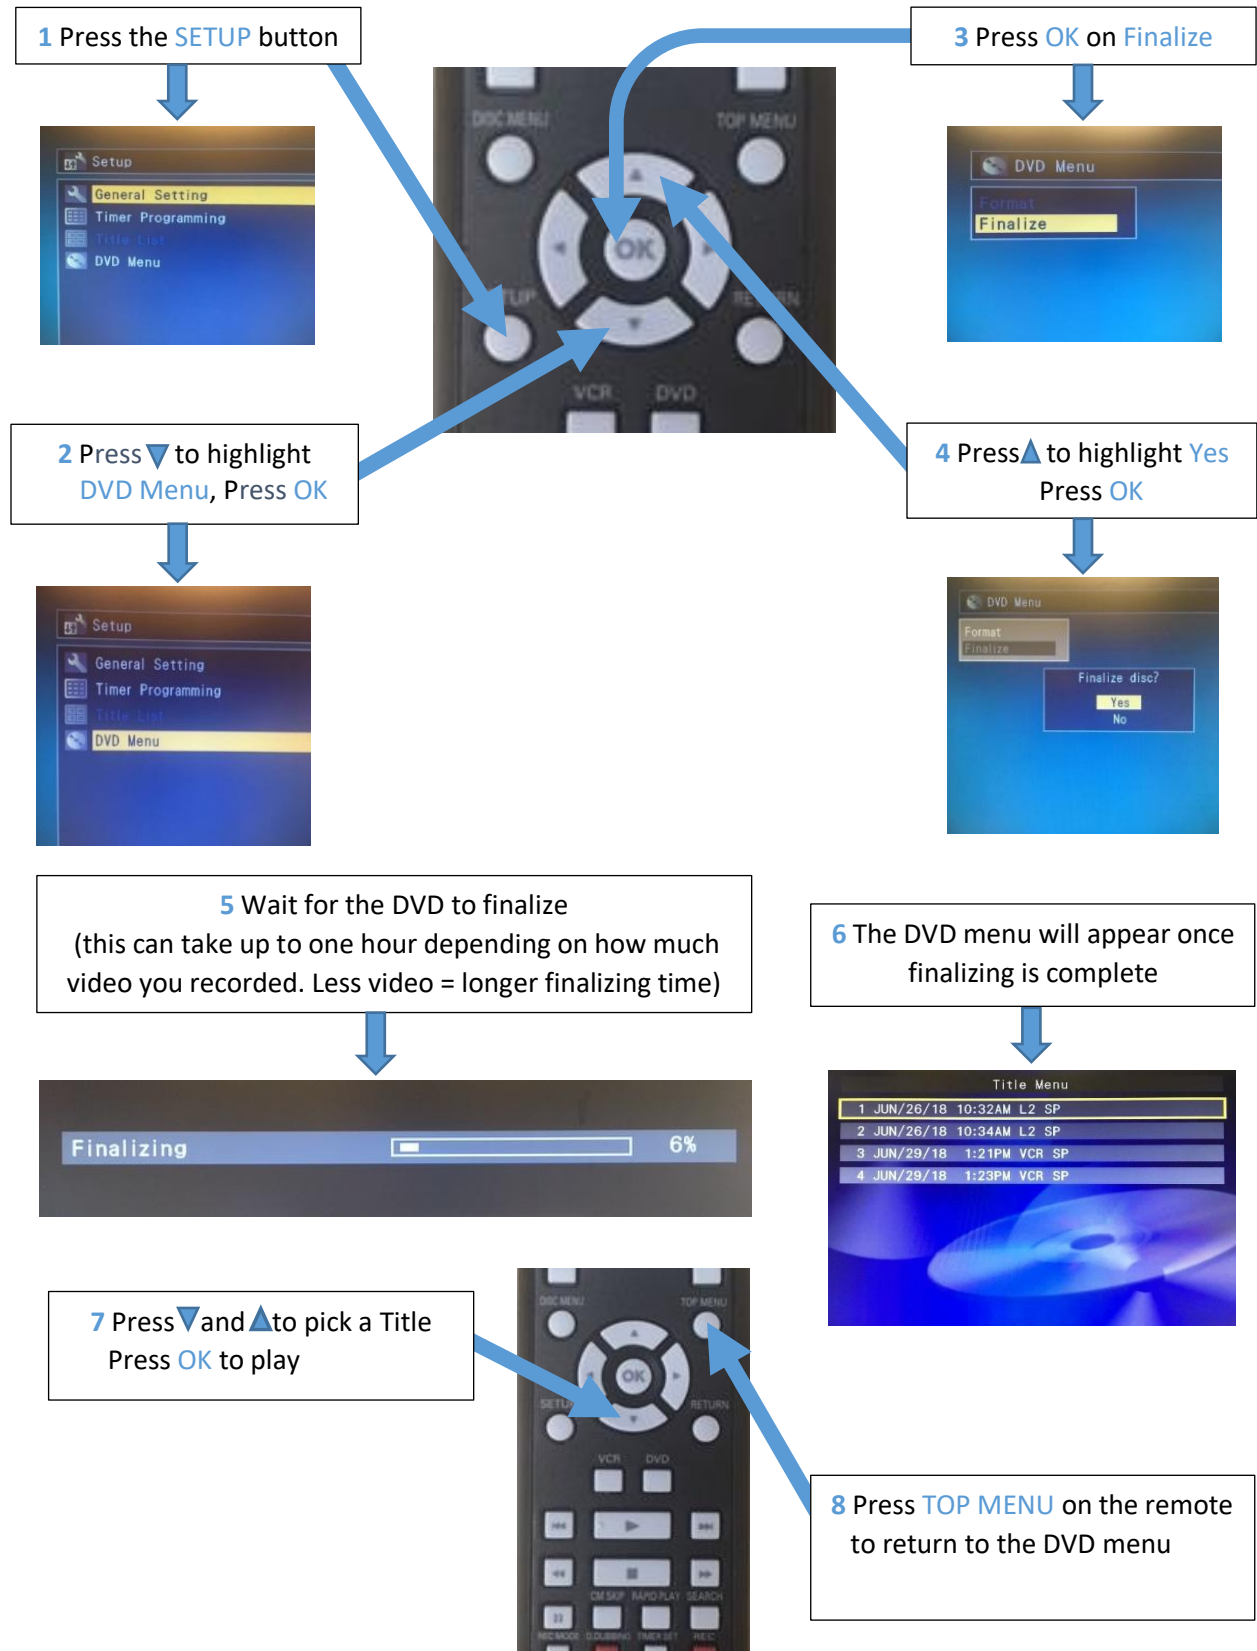

Shutdown the Equipment



1 Press the **eject button** to eject your DVD

2 Turn **OFF** the Sanyo DVD Recorder

3 Remove your tape from the Camcorder and turn it off

a Slide the **OPEN/EJECT** button **forward** and to the **right** to open the tape lid

b Remove your tape

c Push the **door closed**, **wait** for the tape cage to lower and **close the lid**

d Slide the **Power** button to the **OFF** position (turns off the camcorder)



Adjust the Volume

The sound comes from the monitors' internal speakers.

To adjust the volume,
push the buttons
underneath the monitor



Press **1** to show the menu
Press **▼** or **▲** to scroll to
AUDIO ADJUST
Press **2** to select



Press **▲** to scroll up to
VOLUME
Press **2** to select



Press **▲** or **▼** to adjust the
volume
Press **1** to exit volume
Press **1** to exit audio adjust
Press **1** to exit menu

