


Ancel BD310: Advanced Vehicle Diagnostic Scanner

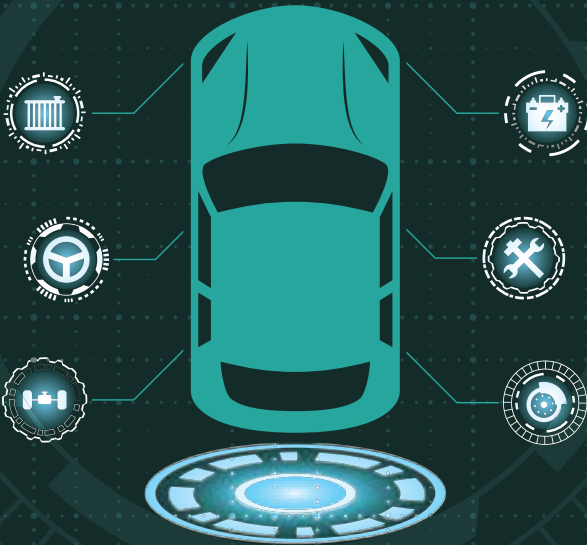

Kit Contents

- Vehicle diagnostic scanner with attached cord
- USB cable
- Magnetic vent-mounting accessory
- Instructions
- Case

If you notice pieces are missing, please speak with a staff member at the Help Desk.



Get the App

To download the ANCEL app, scan the appropriate QR code:

For Android



For IOS



How to Get Started

1. Ensure your vehicle is shut off and in a safe environment.
2. Locate the DLC (Data Link Connector or Diagnostic Link Connector) on your vehicle.
 - The DLC is usually located within 12 inches of the instrument panel, under or around the driver's side.
 - If you can't find the DLC, refer to the vehicle's service manual.
3. Plug the Vehicle Diagnostic Scanner into the DLC.
4. Turn on the ignition, but do not start the engine.
 - For key turn start: Turn the key to ON position only.
 - For push button start: Press the start button once or twice without pushing down the brake pedal.
5. Press the Bluetooth button on the left side of the device to turn off Bluetooth mode.



6. Select the desired function:

- **OBDII** to read or erase codes, stream data, or perform an Evap System Test.
- **Meter** to read analytics such as speed, RPM, and temperature.
- **I/M** to check a variety of monitors, including misfire monitor, fuel system monitor, and oxygen sensor monitor.
- **Setup** to configure language, units of measurement, feedback, and tool information.



For detailed instructions, refer to the BD310 User's Manual included in this kit, or view the online user's manual using the QR code below.





**COQUITLAM
PUBLIC
LIBRARY**

coqlibrary.ca | 604-554-7323